

## SETPS05 / 21560199 Throttle Position Sensor

<b>VOLVO</b>	PENTA	4.3GXl-225-R
<b>VOLVO</b>	PENTA	4.3Gi-200-R
<b>VOLVO</b>	PENTA	4.3GXl-P
<b>VOLVO</b>	PENTA	4.3GXl-Q
<b>VOLVO</b>	PENTA	5.0GXl-270-R
<b>VOLVO</b>	PENTA	5.0GXl-P
<b>VOLVO</b>	PENTA	5.0GXlC-270-R
<b>VOLVO</b>	PENTA	5.0GiC-225-S
<b>VOLVO</b>	PENTA	5.0GXlC-P
<b>VOLVO</b>	PENTA	5.7Gi-300-P
<b>VOLVO</b>	PENTA	5.7GXl-P
<b>VOLVO</b>	PENTA	5.7Gi-300-R
<b>VOLVO</b>	PENTA	5.7GXl-320-R
<b>VOLVO</b>	PENTA	5.7GiC-300-P
<b>VOLVO</b>	PENTA	5.7GXlC-P
<b>VOLVO</b>	PENTA	5.7GiC-300-R
<b>VOLVO</b>	PENTA	5.7GXlC-320-R
<b>VOLVO</b>	PENTA	V6-200-A
<b>VOLVO</b>	PENTA	V6-225-A
<b>VOLVO</b>	PENTA	V6-225-E-A
<b>VOLVO</b>	PENTA	V8-225-C-A
<b>VOLVO</b>	PENTA	V8-300-C-A
<b>VOLVO</b>	PENTA	V8-320-C-A
<b>VOLVO</b>	PENTA	V8-225-C-B
<b>VOLVO</b>	PENTA	V8-300-C-B
<b>VOLVO</b>	PENTA	V8-320-C-B
<b>VOLVO</b>	PENTA	V8-270-A
<b>VOLVO</b>	PENTA	V8-270-B
<b>VOLVO</b>	PENTA	V8-270-C-A
<b>VOLVO</b>	PENTA	V8-270-C-B
<b>VOLVO</b>	PENTA	V8-300-A
<b>VOLVO</b>	PENTA	V8-320-A
<b>VOLVO</b>	PENTA	V8-300-B
<b>VOLVO</b>	PENTA	V8-320-B
<b>VOLVO</b>	PENTA	V8-350-C-D
<b>VOLVO</b>	PENTA	V8-380-C-D
<b>VOLVO</b>	PENTA	V8-380-C-A
<b>VOLVO</b>	PENTA	V8-380-C-B